 


## CONNECTION

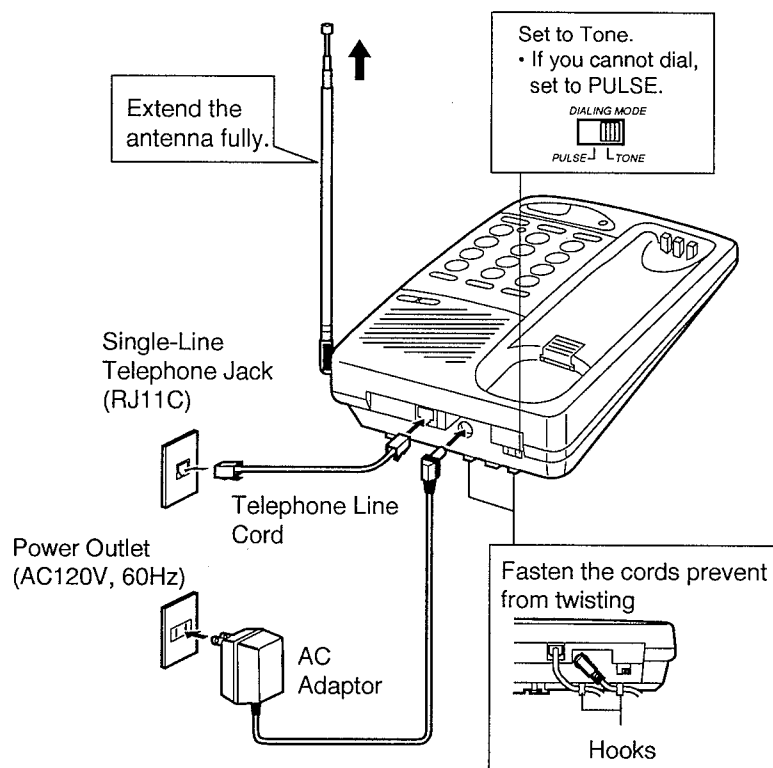

This connection is for U.S.A. version only.

Refer to the simplified manual (cover) for Canada or other areas.


- USE ONLY Panasonic AC ADAPTOR KX-A09-2.
- The AC adaptor must remain connected at all times. (It may feel warm during use. This is normal.)

Fig.3

## OPERATIONS

### NEW OPERATIONS
 
#### Making calls

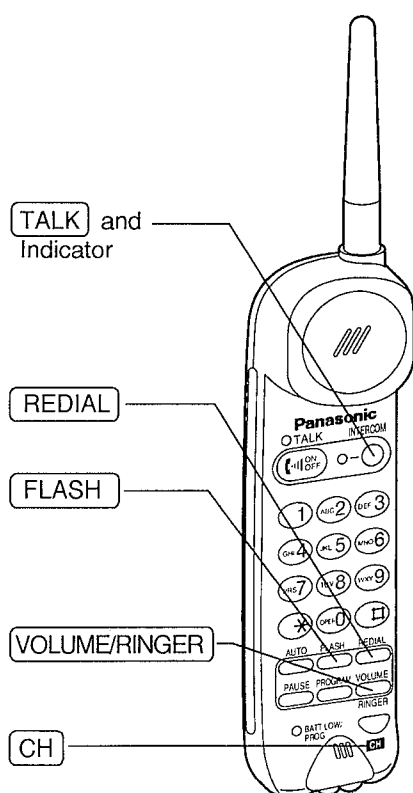

- 1 Press **TALK**
  - The indicator lights.
- 2 Dial a telephone number.
  - If you misdial, press **FLASH** firmly then dial again.
- 3 To hang up, press **TALK** or place the handset on the base unit.
  - The indicator light goes out.

#### To redial the last number

Press **TALK** → **REDIAL** .

#### To select the receiver volume HIGH or NORMAL (preset)

Press **VOLUME/RINGER** while speaking.

- Each time you press, the volume level will change.

#### If noise interferes with the conversation

 
Press **CH** to select a clear channel or move closer to the base unit.

#### OPERATING DISTANCE

To maximize the distance of the handset from the base unit.




## Answering Calls with the Handset

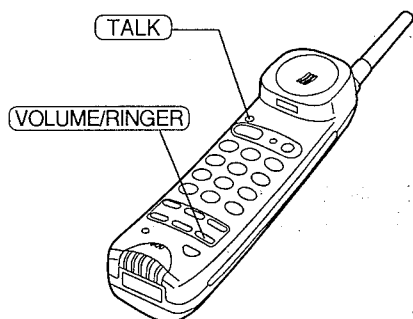

If the handset is off the base unit, press **TALK**.

OR

 If on the base unit, just lift it.

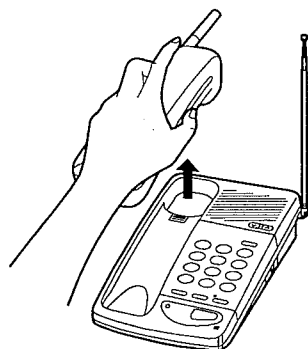

New

### Any Key Talk

You can also answer the call by pressing any dialing button (0 to 9, \*, #) on the handset.

### To select the ringer volume HIGH (preset) or LOW

Be sure the TALK indicator light is off. → Press **VOLUME/RINGER**.

• Each time you press, the bell sounds and the ringer volume will change.

### To turn the ringer OFF

Be sure the TALK indicator light is off. →

While Pressing **VOLUME/RINGER**,

Press **0** until 2 beeps sound.

### To change the ringer to ON from OFF

Be sure the TALK indicator light is off. → press **VOLUME/RINGER**.

• The ringer sounds at the HIGH level.

## NORMAL OPERATIONS

### Storing Phone Numbers in Memory

The dialing buttons (0 to 9) of the handset function as memory stations. The TALK indicator light must be off.

### To erase a stored number

press **PROGRAM** → **AUTO** → the memory station number (for the phone number to be erased).

 
### What the confirmation tone means

1 beep: The number is stored.  
2 beeps: The number is same as previously stored one.

### Memory Sticker

You may use an included memory sticker as memorandum for automatic dialing. Write down the names or phone numbers, then attach it to the unit or at a convenient place.

- 1** Press **PROGRAM**.  
• The BATT LOW/PROG indicator lights.
- 2** Enter a phone number up to 16 digits.  
• If you misdial, press **PROGRAM** to end storing, then restart from step 1.
- 3** Press **AUTO**.
- 4** Press a memory station number (0 to 9).  
• Confirmation tone sounds. (See right side.)  
• To store other numbers, repeat steps 1 through 4.

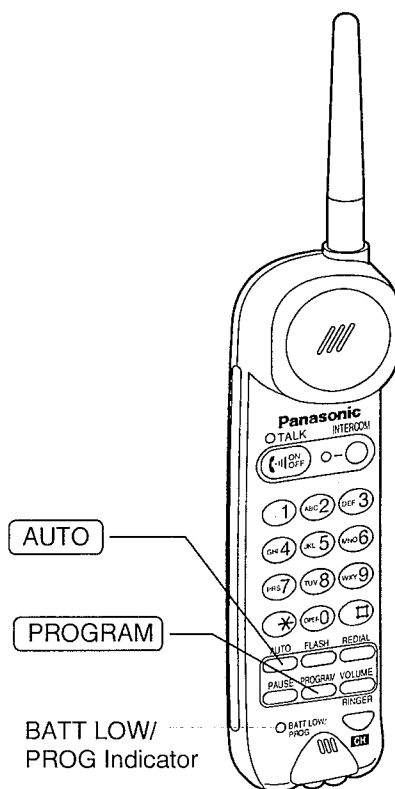


## INTERCOM

2-way intercom is available between the handset and the base unit.

### Paging the base unit from the handset

 
- 1** Handset:  
Press **INTERCOM**,  
then speak.
- 2** Base unit  
When the other party's voice  
is heard, answer through  
**MIC**.
- 3** Handset:  
To end the intercom, press  
**INTERCOM**.

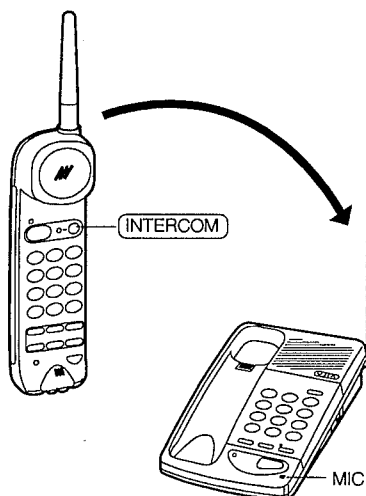

### Paging the handset from the base unit (Handset locator)

Using this feature, you can locate the handset if you misplaced.

 - 1** Base unit:  
Press **LOCATOR/INTERCOM**.  
• The handset beeps for 1 minute.  
• To stop paging, press again.
- 2** Handset:  
Press **INTERCOM** to answer.
- 3** Base unit:  
Speak into **MIC**.
- 4** Handset:  
To end the intercom, press **INTERCOM**.

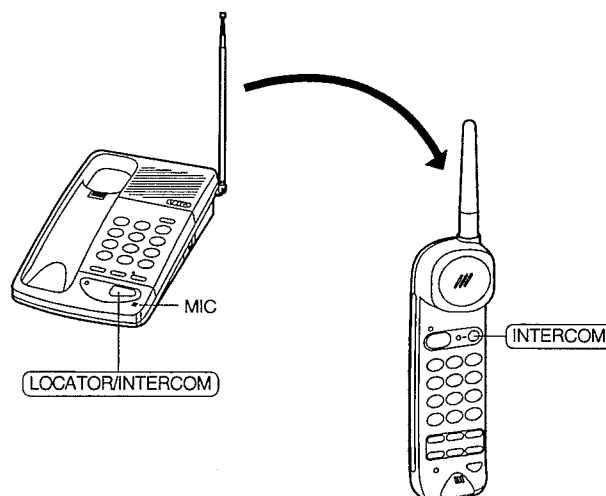

### Automatic Security Code Setting

Whenever you place the handset on the base unit, the unit automatically selects one of 65,000 security codes. These codes help to avoid unauthorized use of your telephone line by another cordless telephone.

### For Call Waiting Service Users

Press **FLASH** lightly if you hear a call-waiting tone while speaking.

- The first call is put on hold and you can answer the second call.
- To return to the first caller, press **FLASH** again.

### Temporary Tone Dialing (For Rotary Service Users)

Press **TONE** before dialing.

- The dialing mode changes to tone. You can enter numbers to access the answering system or electronic banking services, etc. When you hang up, the mode returns to pulse.

### If your Unit is Connected to a PBX

We recommend you press **PAUSE** or **REDIAL/PAUSE** between the access number for an outside line and the phone number.

Pressing **PAUSE** or **REDIAL/PAUSE** once makes a 3.5-second pause and prevents misdialing, when you redial or dial a store number.

